

**CCD Camera  
BU Series**

**BU030/BU031**

**BU080/BU130**

**BU030C/BU030CF**

**BU130/BU130CF**

**Specifications**

**Toshiba Teli Corporation**

## Contents

<b>RESTRICTION FOR USE</b> .....	1
<b>CASES FOR INDEMNITY (LIMITED WARRANTY)</b> .....	2
<b>USAGE PRECAUTIONS</b> .....	3
1. <b>Overview</b> .....	5
2. <b>Features</b> .....	5
3. <b>Configuration</b> .....	7
4. <b>Optional part</b> .....	7
5. <b>Functions</b> .....	8
6. <b>Specifications</b> .....	16
7. <b>Timing chart</b> .....	28
8. <b>Warranty rules</b> .....	30
9. <b>Repair</b> .....	31
10. <b>Outline Drawing</b> .....	32

## RESTRICTION FOR USE

- Should the equipment be used in the following conditions or environments, give consideration to safety measures and inform us of such usage:
  - (1) Use of the equipment in the conditions or environment contrary to those specified, or use outdoors.
  - (2) Use of the equipment in applications expected to cause potential hazard to people or property, which require special safety measures to be adopted.
- This product can be used under diverse operating conditions. Determination of applicability of equipment or devices concerned shall be determined after analysis or testing as necessary by the designer of such equipment or devices, or personnel related to the specifications. Such designer or personnel shall assure the performance and safety of the equipment or devices.
- This product is not designed or manufactured to be used for control of equipment directly concerned with human life (\*1) or equipment relating to maintenance of public services/functions involving factors of safety (\*2). Therefore, the product shall not be used for such applications.
  - (\*1): Equipment directly concerned with human life refers to.
    - Medical equipment such as life-support systems, equipment for operating theaters.
    - Exhaust control equipment for exhaust gases such as toxic fumes or smoke.
    - Equipment mandatory to be installed by various laws and regulations such as the Fire Act or Building Standard Law
    - Equipment related to the above
  - (\*2) :Equipment relating to maintenance of public services/functions involving factors of safety refers to.
    - Traffic control systems for air transportation, railways, roads, or marine transportation
    - Equipment for nuclear power generation
    - Equipment related to the above

## CASES FOR INDEMNITY (LIMITED WARRANTY)

We shall be exempted from taking responsibility and held harmless for damage or losses incurred by the user in the following cases.

- Natural disasters, such as an earthquake and thunder, fire or any other act of God; acts by third parties; misuse by the user, whether intentional or accidental; use under extreme operating conditions.
- In the case of indirect, additional, consequential damages (loss of business interests, suspension of business activities) are incurred as result of malfunction or non-function of the equipment, we shall be exempted from responsibility for such damages.
- In the case damage or losses are caused by failure to observe the information contained in the instructions in this instruction manual and specifications.
- In the case damage or losses are caused by use contrary to the instructions in this instruction manual and specifications.
- In the case damage or losses are caused by malfunction or other problems resulting from use of equipment or software that is not specified.
- In the case damage or losses are caused by repair or modification conducted by the customer or any unauthorized third party (such as an unauthorized service representative).
- Expenses we bear on this product shall be limited to the individual price of the product.
- The item that is not described in specifications of this product is off the subject of the guarantee.
- The attachment mistake of a cable.

## USAGE PRECAUTIONS

### ● Handle carefully

Do not drop the equipment or allow it to be subject to strong impact or vibration, as such action may cause malfunctions. Further, do not damage the connection cable, since this may cause wire breakage.

### ● Environmental operating conditions

Do not use the product in locations where the ambient temperature or humidity exceeds the specifications.

Otherwise, image quality may be degraded or internal components may be adversely affected. In particular, do not use the product in areas exposed to direct sunlight. Moreover, during shooting under high temperatures, vertical stripes or white spots (noise) may be produced, depending on the subject or camera conditions (such as increased gain). However, such phenomena are not malfunctions.


### ● Combination of C-mount lens

Depending on the lens you use, the performance of the camera may not be brought out fully due to the deterioration in resolution and brightness in the peripheral area, occurrence of a ghost, aberration and others. When you check the combination between the lens and camera, be sure to use the lens you actually use.

When installing a lens in the camera, make sure carefully that it is not tilted.

In addition, use a mounting screw free from defects and dirt. Otherwise, the camera may be unable to be removed.

As for the C-mount lens used combining this product, the projection distance from bottom of the screw should use 10mm or less.

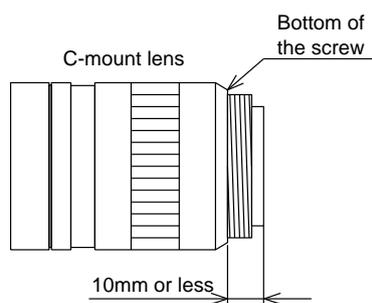

### ● Mounting to a pedestal

When mounting this product to a pedestal, make sure carefully that the lens doesn't touch with the pedestal.

### ● Do not shoot under intense light

Avoid intense light such as spot lights on part of the screen because it may cause blooming or smears. If intense light falls on the screen, vertical stripes may appear on the screen, but this is not a malfunction.

● **Occurrence of moiré**

If you shoot thin stripe patterns, moiré patterns (interference fringes) may appear. This is not a malfunction.

● **Occurrence of noise on the screen**

If an intense magnetic or electromagnetic field is generated near the camera or connection cable, noise may be generated on the screen. If this occurs, move the camera or the cable.

Handling of the protective cap

If the camera is not in use, attach the lens cap to the camera to protect the image pickup surface.

If the equipment is not to be used for a long duration

Turn off power to the camera for safety.

● **If the equipment is not to be used for along duration**

Turn off power to the camera for safety and attach the lens cap to the camera to protect the image pickup surface.

● **Maintenance**

Turn off power to the equipment and wipe it with a dry cloth.

If it becomes severely contaminated, gently wipe the affected areas with a soft cloth dampened with diluted neutral detergent. Never use alcohol, benzene, thinner, or other chemicals because such chemicals may damage or discolor the paint and indications.

If the image pickup surface becomes dusty, contaminated, or scratched, consult your sales representative.

● **Disposal**

When disposing of the camera, it may be necessary to disassemble it into separate parts, in accordance with the laws and regulations of your country and/or municipality concerning environmental contamination.

**Following information is only for EU-member states:**

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the take-back and recycling of this product, please contact your supplier where you purchased the product.



	"This symbol is applicable for EU member states only"
--	---

## 1. Overview

This BU series is an integrated-(one-body)-type camera that adopts all pixel data readout inter line CCD. These are BU030 (VGA 1/3 type), BU031 (VGA 1/2 type), BU080 (XGA), BU130 (SXGA). Suffix [C] or [CF] is attached to the color models. For video output and camera control, the USB 3.0 interface standard is adopted for high transfer rate, and it is easy to integrate into industrial equipment.

## 2. Features

### 2.1 High frame rate

Supporting high frame rate, BU030 VGA 125fps, BU031 VGA 125fps, BU080 XGA 40fps, BU130 SXGA 30fps.

### 2.2 All pixel readout

All pixel signals (in the effective area) are output in one frame processing.

### 2.3 Full frame shutter

Since all pixels are output even in Random Trigger Shutter operation, high resolution can be achieved, without deteriorating the vertical resolution.

### 2.4 Square grids

The CCD pixels arrayed in square grids facilitates computation for image processing.

### 2.5 USB\* 3.0 interface

Video output and camera control are performed via the USB 3.0 standard interface. Data transfer is up to 5Gbps (Maximum) that enables to output uncompressed video data at high frame rate.

### 2.6 USB3 Vision\*

This product is based on USB3 Vision Ver.1.0.

### 2.7 GenICam\* Ver.2.3

This product is based on GenICam Generic Interface for Cameras Ver.2.3.

## **2.8 IIDC2\* Digital Camera Control Specification Ver.1.0.0**

This product is based on IIDC2 Digital Camera Control Specification Ver.1.0.0.

## **2.9 e-CON\* Connector adoption**

The e-CON connector adoption enables to assemble the cable easily without using special tools.

## **2.10 Binning mode**

B/W models have binning mode. In this mode, pixel data is combined by vertical and horizontal. Vertical binning mode achieves high frame rate

## **2.11 Random Trigger Shutter**

The Random Trigger Shutter function provides images in any timing by input of an external trigger signal. Trigger control from PC is available as well.

## **2.12 Scalable**

Selectable video output area. This mode achieves higher frame rate by reducing vertical output area. And reduces occupied data rate of USB bus by reducing horizontal output area.

## **2.13 Color processing**

Color models have built in color processing. There are RGB, BGR, YUV 4:2:2, YUV 4:1:1, Bayer and Mono output modes.

## **2.14 IR-cut filter**

Build-in IR-cut filter models are optional for color models.

Suffix [F] is attached to the model name of built-in IR-cut filter model. (e.g. BU030CF, BU130CF)

\* Suffix [F] is not shown in the common part of specifications.

## **2.15 Compact and lightweight**

This camera is compact and lightweight; it is easy to integrate into industrial equipment.

## **2.16 EU RoHS & Chinese ROHS**

\* USB is a unified standard established by USB-IF(USB Implementers Forum).

\* USB3 Vision is a unified standard established by AIA (Automated Imaging Association).

\* GenICam is a registered trademark of EMVA (European Machine Vision Association).

\* IIDC2 is a unified standard established by JIIA (Japan Industrial Association).

\* e-CON (Easy & Economy connector) is a sensor connector that is normalized by the manufacturer of the sensor, FA equipment and connector.

### 3. Configuration

(1) Camera body

\* No application software and manuals are attached to this camera.

### 4. Optional part

- Camera mounting kit                      Model name: CPTBU

\* Contact your dealer / distributor for details of option units.

## 5. Functions

### 5.1 Gain

Manual gain control is available from 0 to +18dB.

#### **Notes on gain setting:**

Setting the gain value too high increases noises. When you adjust the brightness of the image, I ask you to have final image quality checked with your environment.

### 5.2 Black Level

Black level is adjustable from -5% to +25% as white saturation level is 100%.

### 5.3 Gamma

Gamma correction curve is adjustable from 0.45 to 1.

### 5.4 LUT (Look Up Table)

Arbitrary curve and binarization are possible by using 10 bit input and 10 bit output LUT.

### 5.5 Exposure Time

Manual exposure time control is available. Exposure time is adjustable by the internal sync signal.

### 5.6 White balance

Color models have two white balance modes, manual white balance (MWB) and one-push auto white balance (OPWB). Select the mode to suit the subject and purpose.

#### 5.6.1 MWB

R/B gain can be set independently for each.

#### 5.6.2 OPWB

When OPWB is used, the camera itself adjusts R/B gain to ensure the correct white balance for the effective area.

### 5.7 Masking

Color models have RGB 3x3 matrixes correction.


## 5.8 Random Trigger Shutter

An image is captured at the desired timing using trigger signal input. External trigger signal from trigger input connector and software trigger from control command via the USB 3.0 interface are available (Edge mode / Bulk mode). Trigger polarity is selectable (High active / Low active).

Note that Random Trigger Shutter will cause a delay between trigger signal and start of exposure. See 7. Timing Chart for detail.


### - Edge mode (TriggerSequence0)

The exposure time is determined by Exposure Time setting.

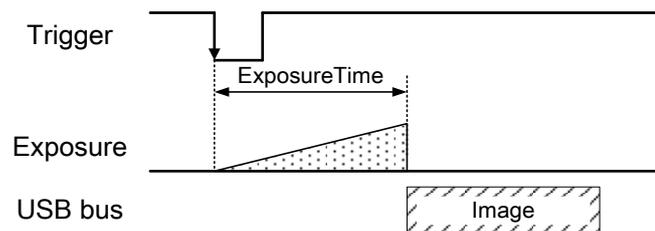


### - Level mode (TriggerSequence1)

The exposure time is determined by the pulse width of the trigger signal.

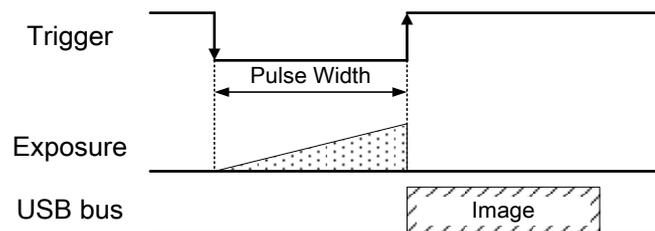

### - Bulk mode (TriggerSequence6)

Camera exposes and transfers multiple frames by a single trigger.

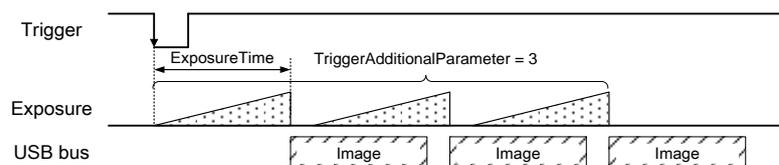

**Notes on long exposure:**


- When you set the exposure time longer than approximately 1 second, white spots and the unevenness in highlight portion might occasionally be observed on screen. This phenomenon is due to the characteristics of the CCD device. It's not a malfunction of the camera itself.

**Note on Random Trigger Shutter:**

- When the trigger signal is noisy, there is a possibility of causing the malfunction. In this case, please input a noise-free signal.

**5.9 Trigger Delay**


You can add the delay between trigger signal input and the start of exposure.

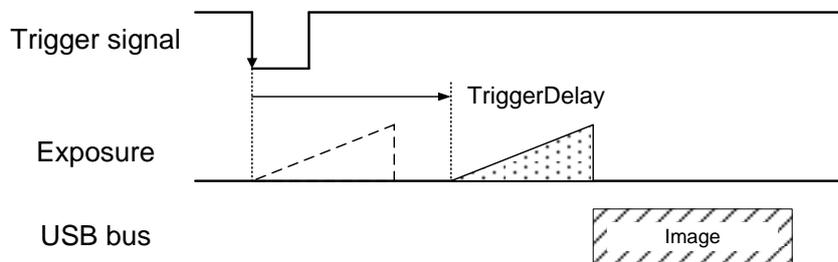

### 5.10 AntiGlitch - AntiChattering

AntiGlitch and AntiChattering functions filter noise and unstable state of the digital input (trigger signal).

This function is available only in B/W models.

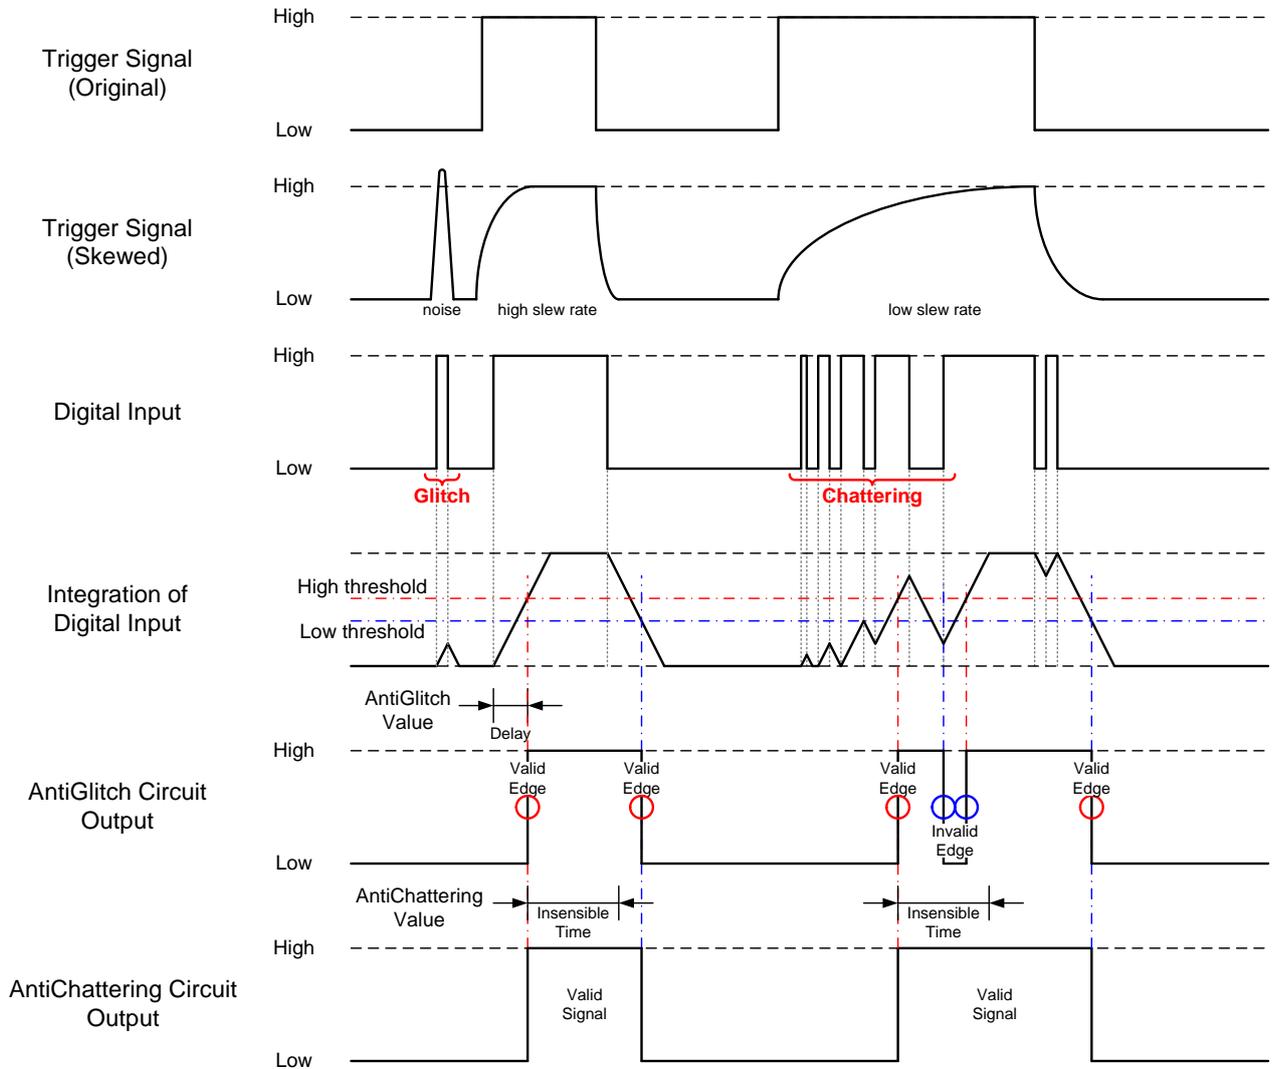


## 5.11 Event

Camera notifies FrameTrigger status and other information by USB3 Vision Event Packet.

- FrameTrigger : Reception of Frame Start Trigger
- FrameTriggerError : Rejection of Frame Start Trigger
- FrameTriggerWait : Start of waiting for Frame Start Trigger
- FrameTransferStart : Start of transferring streaming data
- FrameTransferEnd : End of transferring streaming data
- ExposureStart : Start of Exposure
- ExposureEnd : End of Exposure
- Timer0Start : Start of Timer0
- Timer0End : End of Timer0

Events timing are as following chart.

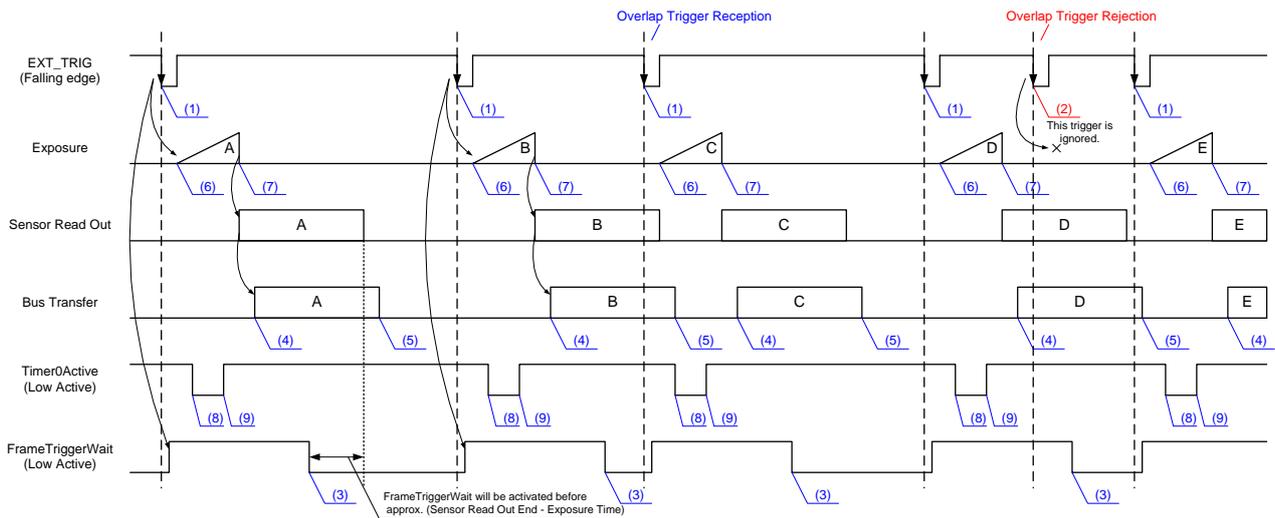


### Event Name

- (1) FrameTrigger : Reception of Frame Start Trigger.
- (2) FrameTriggerError : Rejection of Frame Start Trigger.
- (3) FrameTriggerWait : Start of waiting for Frame Start Trigger.
- (4) FrameTransferStart : Start of transferring streaming data.
- (5) FrameTransferEnd : End of transferring streaming data.
- (6) ExposureStart : Start of Exposure.
- (7) ExposureEnd : End of Exposure.
- (8) Timer0Start : Start of Timer0.
- (9) Timer0End : End of Timer0.

## 5.12 GPIO

Selected signals are output from GPIO pins of I/O connector. Following signals are selectable.  
Output signal is 5V CMOS.

- TIMER0 ACTIVE : This signal can be used as strobe control signal.  
The delay time and pulse width of this signal are configurable.
- USER OUTPUT : Level selectable user output by register setting.
- EXPOSURE ACTIVE : Period from exposure start to end.
- FRAME ACTIVE : Period from exposure start to CCD transfer completion.
- FRAME TRANSFER : Period of transferring image data on USB bus.
- FRAME TRIGGER WAIT : Indicating waiting a Random Trigger Shutter.  
An External trigger is input during this period,  
exposure starts immediately.

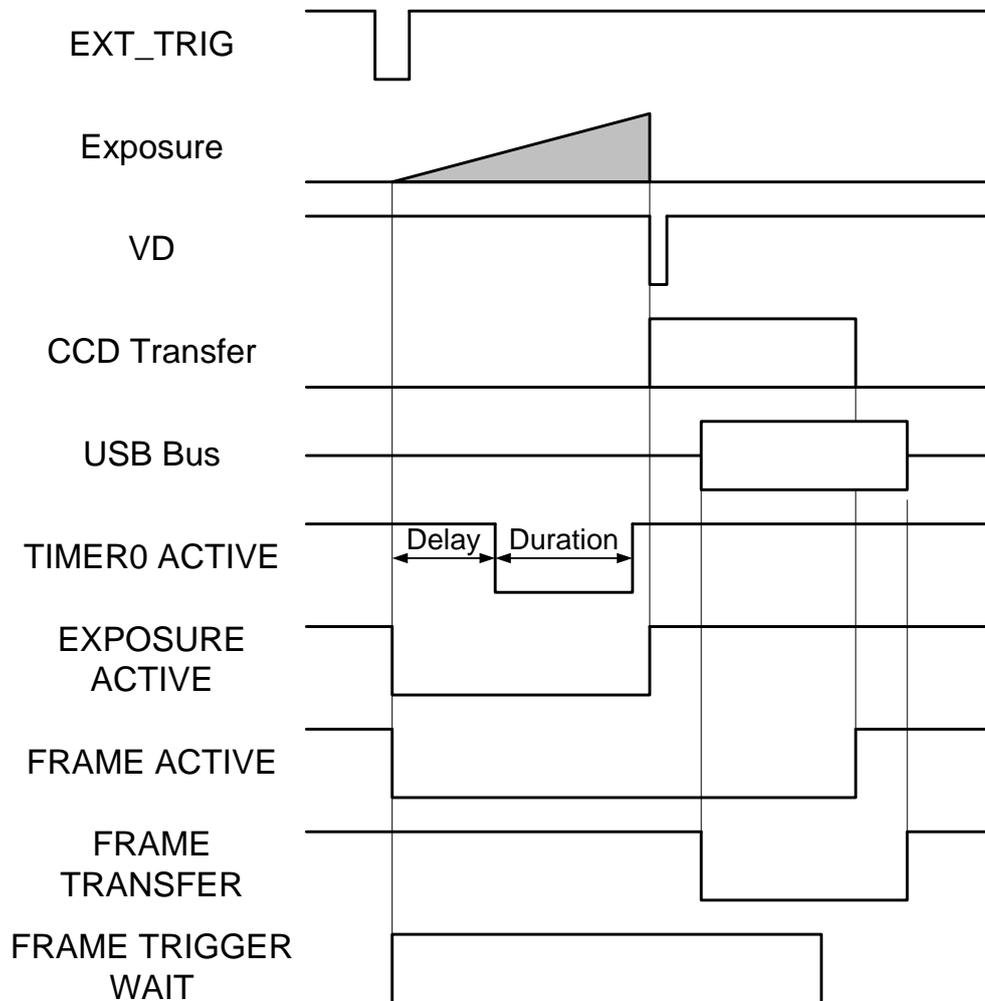

\* ActiveLow

### 5.13 Scalable mode

Scalable mode is to read out arbitrary area of the image. Only single rectangle is selectable. Concave or convex shape is impossible. The number of selectable window is only one.

- Window size:  $\{A+2*m (H)\} * \{B+2*n (V)\}$

A, B = minimum unit size

m, n = integer

The window size is equal or less than maximum image size.


- Start address:  $\{2*i (H)\} * \{2*j (V)\}$

i, j = integer

The window size is equal or less than maximum image size.

	BU030	BU031	BU080	BU130
Width and OffsetX unit size	2x2	2x2	2x2	2x2
Height and OffsetY unit size	2x2	2x2	2x2	2x2
Minimum unit size (H) * (V)	160x120	160x120	256x192	160x120
Maximum unit size (H) * (V)	640x480	640x480	1024x768	1280x960

	BU030C	BU130C
Width and OffsetX unit size	2x2	2x2
Height and OffsetY unit size	2x2	2x2
Minimum unit size (H) * (V)	160x120	160x120
Maximum unit size (H) * (V)	640x480	1280x960

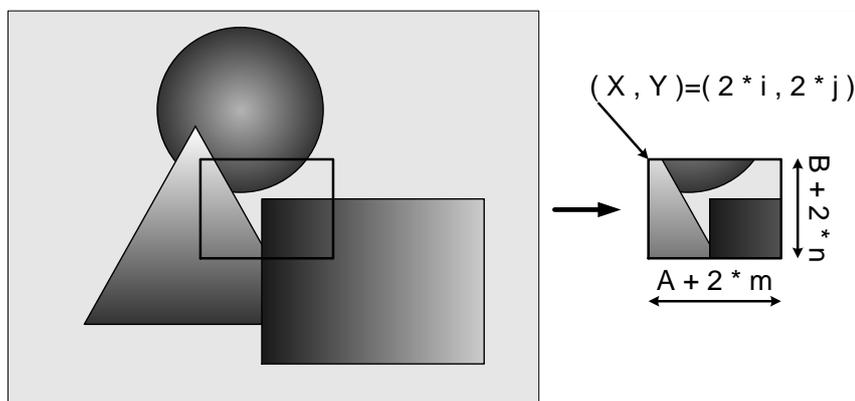

In the scalable mode, camera reads out only necessary area at the normal speed and reads out other area at high speed. The trigger interval can be shorter when the vertical height size is small. However, the trigger interval cannot be shorter when the horizontal width size is small, due to the operation mechanism of the CCD sensor.

#### **Notes on scalable mode:**

- White lines may occur in the upper portions of the screen when strong light exists in a wide area during the scalable mode. This is not a malfunction. If white lines occur, adjust the amount of incident light using the lens.

## 5.14 Binning Mode

B/W models have binning mode. In the binning mode, pixel data is combined by vertical and horizontal.

	BU030	BU031	BU080	BU130
Binning mode	2(H)*2(V)	2(H)*2(V)	2(H)*2(V)	2(H)*2(V)

## 5.15 User Free Memory

A free memory area is available to read and write arbitrary data for user. Individual numbers can be assigned when multiple BU cameras are connected.

## 5.16 Test Pattern

Following test patterns are available.

- Black : Full screen 0 LSB (@ 8-bit)
- White : All pixels 255 LSB (@ 8-bit)
- Gray A : Full screen 170 LSB (10101010<sub>B</sub>) (@ 8-bit)
- Gray B : Full screen 85 LSB (01010101<sub>B</sub>) (@ 8-bit)
- Horizontal ramp waveform
- Vertical ramp waveform
- Grey Scale (B/W models)
- Color Bar (Color models)

## 6. Specifications

### 6.1 Electrical specification

Model Name	BU030	BU031	BU080	BU130
Imager	all-pixel-data-readout interline transfer CCD			
Number of total pixels (H) * (V)	692*504	692*504	1077*788	1348*976
Number of effective pixels (H) * (V)	659*494	659*494	1034*779	1296*966
Number of Video out pixels (H) * (V)	640*480	640*480	1024*768	1280*960
Scanning area (H) * (V) [mm]	4.88*3.66 (1/3 type)	6.52*4.89 (1/2 type)	4.81*3.62 (1/3 type)	4.86*3.62 (1/3 type)
Pixel size (H) * (V) [ $\mu$ m]	7.4 *7.4	9.9 *9.9	4.65 *4.65	3.75 *3.75
Scan method	Non-interlace			
Aspect ratio	4:3			
Standard sensitivity	1700lx F5.6, 1/125s	1700lx F5.6, 1/125s	1700lx F5.6, 1/40s	1300lx F8, 1/30s
Minimum sensitivity	F1.4, Gain +18dB, Video level 50%			
	7lx	7lx	7lx	3lx
Gain	MANUAL			
Setting range	0 to +18dB (factory setting : 0dB)			
Black Level	-5 to 25% (factory setting : 0% [ 0LSB@8bit ])			
Gamma	$\gamma=1.0$ to 0.45 (factory setting : $\gamma=1.0$ )			
LUT	Input 10 bit, Output 10 bit			
User Setting Memory	15 channels			
User Free Memory	64 Byte			
Test Pattern	Black, White, Gray A, Gray B Horizontal ramp waveform, Vertical ramp waveform, Grey Scale (factory setting : OFF)			
Power supply	DC +5V $\pm$ 5% (from USB connector)			
Power consumption (at the all pixel readout)	2.6W (maximum)			

Model Name		
Without IR-cut filter	BU030C	BU130C
With IR-cut filter	BU030CF	BU130CF
Imager	all-pixel-data-readout interline transfer CCD	
Number of total pixels (H) * (V)	692 * 504	1348 * 976
Number of effective pixels (H) * (V)	659 * 494	1296 * 966
Number of Video out pixels (H) * (V)	640 * 480	1280 * 960
Scanning area (H) * (V) [mm]	4.88 * 3.66 (1/3 type)	4.86 * 3.62 (1/3 type)
Pixel size (H) * (V) [μm]	7.4 * 7.4	3.75 * 3.75
Color filter	RGB primary color mosaic-on-tip color filter	
Scan method	Non-interlace	
Aspect ratio	4:3	
Standard sensitivity		
Without IR-cut filter	3500lx, F5.6, 1/125s	1250lx, F5.6, 1/30s
With IR-cut filter	4200lx, F5.6, 1/125s	1500lx, F5.6, 1/30s
Minimum sensitivity	F1.4, Gain +18dB, Video level 50%	
Without IR-cut filter	14lx	5lx
With IR-cut filter	17lx	6lx
Gain	MANUAL	
Setting range	0 to +18dB (factory setting : 0dB)	
Black Level	-5 to 25% (factory setting : 0% [ 0LSB@8bit ])	
White balance	MWB, OPWB (factory setting : MWB)	
Effective range		
Without IR-cut filter	3,500~6,500K	
With IR-cut filter	2,500~6,500K	
MWB setting format	R/B gain independent setting	
OPWB effective area	Full (Full pixel)	
Color Correction Matrix	3 x 3 matrix	
Gamma	γ=1.0 to 0.45 (factory setting : γ=1.0)	
LUT	Input 10 bit, Output 10 bit	
User Setting Memory	15 channels	
User Free Memory	64 Byte	
Test Pattern	Black, White, Gray A, Gray B Horizontal ramp waveform, Vertical ramp waveform, Color Bar (factory setting : OFF)	
Power supply	DC +5V±5% (from USB connector)	
Power consumption (at the all pixel readout)	2.7W (maximum)	

## 6.2 Internal sync signal specification

	BU030	BU031	BU080	BU130
Fundamental clock frequency	50.000MHz ±100ppm	50.000MHz ±100ppm	45.000MHz ±100ppm	50.000MHz ±100ppm

	BU030C	BU130C
Fundamental clock frequency	50.000MHz ±100ppm	50.000MHz ±100ppm

## 6.3 Electronic shutter specification

	BU030	BU031	BU080	BU130
Exposure time	MANUAL			
MANUAL	10μs to 16s	10μs to 16s	30μs to 16s	30μs to 16s


	BU030C	BU130C
Exposure time	MANUAL	
MANUAL	10μs to 16s	30μs to 16s

## 6.4 Random Trigger Shutter specification


Trigger Mode	External trigger, Software trigger (factory setting : External trigger)
External trigger	Input via I/O connector
Input circuit	
Input level	Low: 0 to 0.5V, High: 2.0 to 24.0V
Polarity	High active / Low active (factory setting : Low active)
Pulse width	50μs (minimum)
Input impedance	High impedance
Software trigger	USB3 Vision command control
Exposure time	Edge mode, Level mode, Bulk mode (factory setting : Edge mode)
Edge mode	The exposure time depends on the MANUAL Exposure time setting
Level mode	The exposure time depends on External trigger width
Bulk mode	The exposure time depends on the MANUAL Exposure time setting
Max number of Exposures in Bulk mode	255 times
Trigger Delay	0 to 2000000μs (factory setting : 0μs)
AntiGlitch	90ns to 2ms (factory setting : 90ns)
AntiChattering	2us to 2ms (factory setting : 2us)

## External trigger input recommended circuit:

### 1) Isolated I/F

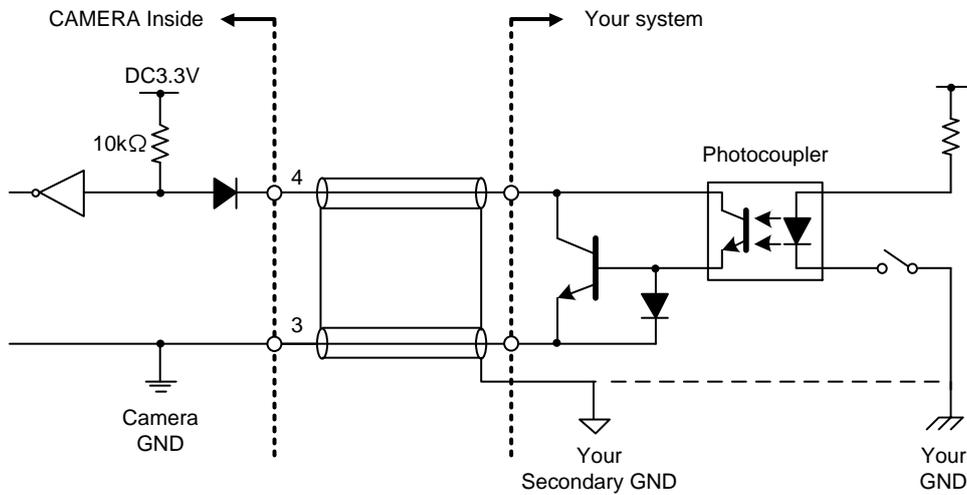

### 2) Non-isolated I/F

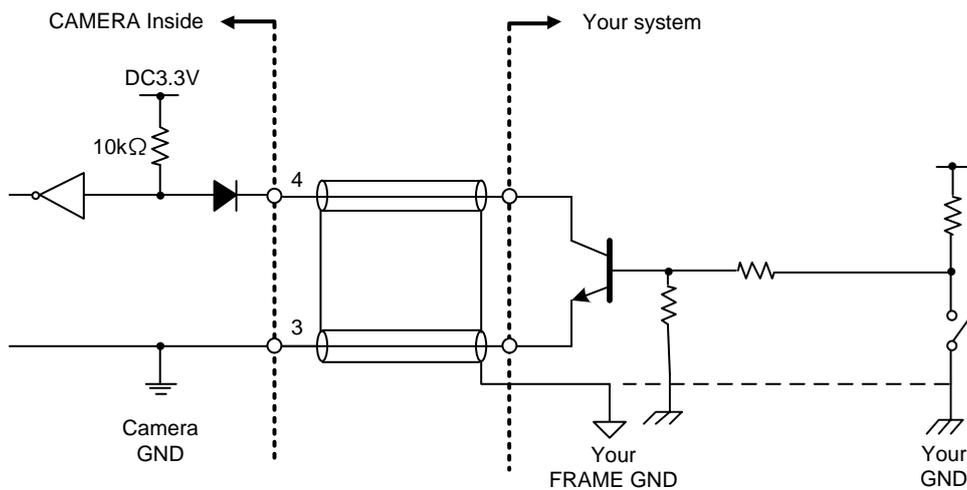

- The recognition of the trigger signal depends on the length, characteristic or driving current of the cable. Therefore please confirm your system about those conditions.
- Pin 3 is signal ground. It isn't conducted with camera frame.  
Using shield cable, terminal processing of the shield is referred as above.
- Please confirm the EMC adaptability in whole of your system.

## 6.5 GPIO Output signal specification

Output channel	2 channel
Output signal	TIMER0 ACTIVE, USER OUTPUT, EXPOSURE ACTIVE, FRAME ACTIVE, FRAME TRANSFER, FRAME TRIGGER WAIT
Output level	5V CMOS
Maximum Current	+/-32mA
Polarity	High active / Low active (factory setting : Low active)
Timer0 Active	
Delay	0 to 2000000 $\mu$ s (factory setting : 0 $\mu$ s)
Duration	0 to 2000000 $\mu$ s (factory setting : 0 $\mu$ s)
TimerTriggerSource	Line0Active, ExposureStart, FrameTrigger

## 6.6 Interface specification

Interface	USB 3.0 (Only SuperSpeed is supported)
Transmission speed	5Gbps (Maximum)
Protocol	USB3 Vision
Cable length	Up to 3.0 m

## 6.7 LED states

Camera state	Lamp indication
No power	Off
Link detection in progress	Fast flash green (ON:20ms, OFF:60ms)
Connection Error	Flash alternate red / green
SuperSpeed connected, but no data being transferred	Flash green (ON: 200ms, OFF: 800ms)
SuperSpeed connected, waiting for trigger	Flash orange (ON: 200ms, OFF: 800ms)
Data being transferred	Solid Green
Error during data transfer	Solid Red (Time period: 500ms)
Stand-by	Super slow flash orange (ON:200ms, OFF: 2800ms)

## 6.8 Image output format

	BU030	BU031	BU080	BU130
Image output format	Mono 8 bit			
	Mono 10bit			
Frame rate (at the all pixel readout)	Maximum 125 fps	Maximum 125 fps	Maximum 40 fps	Maximum 30 fps

	BU030C	BU130C
Image output format	YUV4:1:1 12bit	
	YUV4:2:2 16bit	
	RGB 24bit	
	BGR 24bit	
	Bayer 8bit	
	Bayer 10bit	
	Mono 8bit	
Frame rate (at the all pixel readout)	Maximum 125 fps	Maximum 30 fps

### **Notes on Dropping Frames:**

- Depends on your PC or USB interface card configurations, images may not be captured normally (e.g. dropping frames may occur). In this case, change to frame rate setting lower.

## 6.9 Event notification

Event name	FrameTrigger, FrameTriggerError, FrameTriggerWait FrameTransferStart, FrameTransferEnd ExposureStart, ExposureEnd Timer0Start, Timer0End
Event notification delay	approx. 10us later from the event occurs
Time stamp unit	16.7ns (60.0MHz)

### 6.10 Machine external specification

Dimensions	29 mm(W) * 29 mm (H) * 13 mm (D) (Not including protrusion)
Mass	approx. 27g
Lens mount	C-mount
Flange back	17.526mm
Camera body grounding insulation status	Non-Conductive between circuit GND and camera body

### 6.11 Operation Ambient conditions

Operation assurance	Temperature: 0°C to +40 °C, Camera housing temperature: less than 50 °C Humidity: 10% to 90% (no condensation)
Storage assurance	Temperature : -20 to +60 Celsius Humidity : +90% or less (no condensation)
EMC condition	EMI (Electro-Magnetic interference) : EN61000-6-4, FCC Part 15 Subpart B Class A EMS (Electro-Magnetic susceptibility) : EN61000-6-2

#### Notes on Heat Dissipation:

- The top surface temperature of camera housing must be kept less than 50 °C in principle. However, about the upper limit of top surface temperature of camera housing and the allowed ambient temperature of each model, please refer to the "Thermal design manual" on our HP.

#### Notes on Conformity of the EMC:


The adaptability of the safety standard of this camera is assured in the condition of combination with the following parts:

- USB Cable                      USB3C-A/1-CS/1-C-0                      (COMOSS Electronic Co., Ltd.)
- e-CON Cable                    3.0m, Shield cable                      (Fabricated parts)

#### Parts:


- e-CON connector                XN2A-1470                               (OMRON Corporation)
- Shielded wire                    UL1533 (AWG28)                       (Hitachi Cable, Ltd.)

#### Connection:

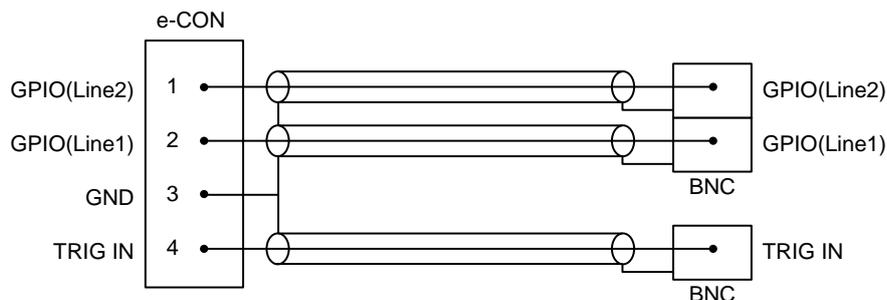

Please confirm the EMC adaptability when it combines with parts other than them.


## 6.12 Connector pin assignment
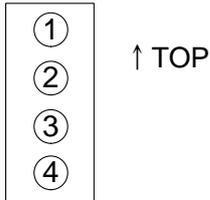
<b>USB 3.0 interface connector</b>			
Connector model: WMUR-10F6L1PH5N (WIN WIN PRECISION INDUSTRIAL)			
Pin No.	I/O	Signal Name	Function
1	-	VBUS	Power
2	I/O	D-	USB2.0 differential pair
3	I/O	D+	
4	-	NC	Not connected
5	-	GND	Ground for power return
6	O	SSTX-	SuperSpeed transmitter differential pair
7	O	SSTX+	
8	-	GND_DRAIN	Ground for SuperSpeed signal return
9	I	SSRX-	SuperSpeed receiver differential pair
10	I	SSRX+	
<b>I/O Connector</b>			
Connector (Camera side)		37204-62B3-004PL (Sumitomo 3M) or equivalent	
Matching connector (Cable side)		Connectors which conformed to e-CON e.g. 37104 series (Sumitomo 3M), RITS 4P series (Tyco)	
* Matching connector is not an accessory of this product.			
Pin assignment			
			
* Above figure is connector view from insert side.			
Pin No.	I/O	Signal Name	Function
1	O	GPIO(Line2)	GPIO Output
2	O	GPIO(Line1)	GPIO Output
3	-	GND	Ground
4	I	TRIG_IN	Trigger Input


### 6.13 Typical spectral response

The lens characteristics and light source characteristics is not reflected in table.


<BU030>

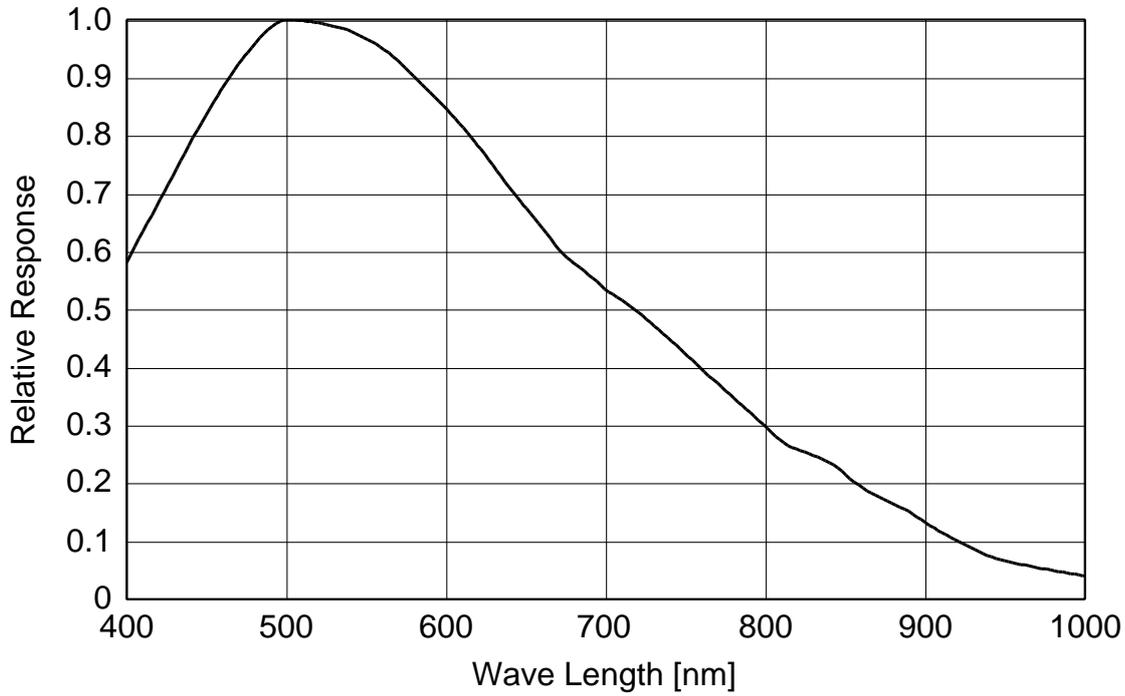


<BU031>

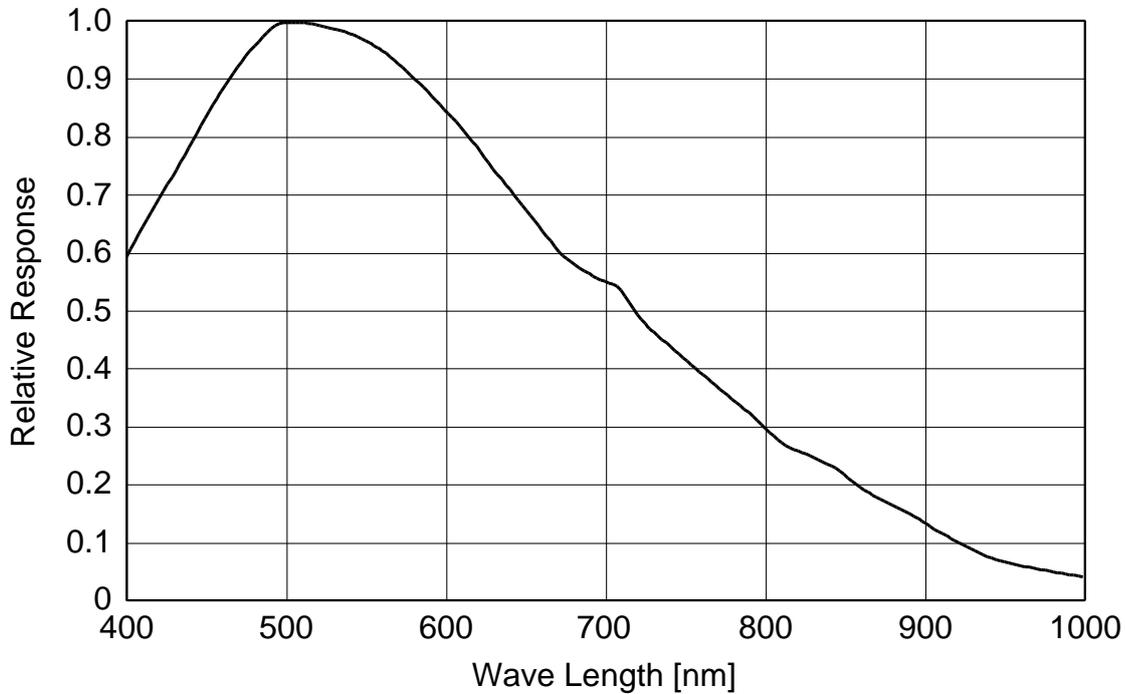


<BU080>

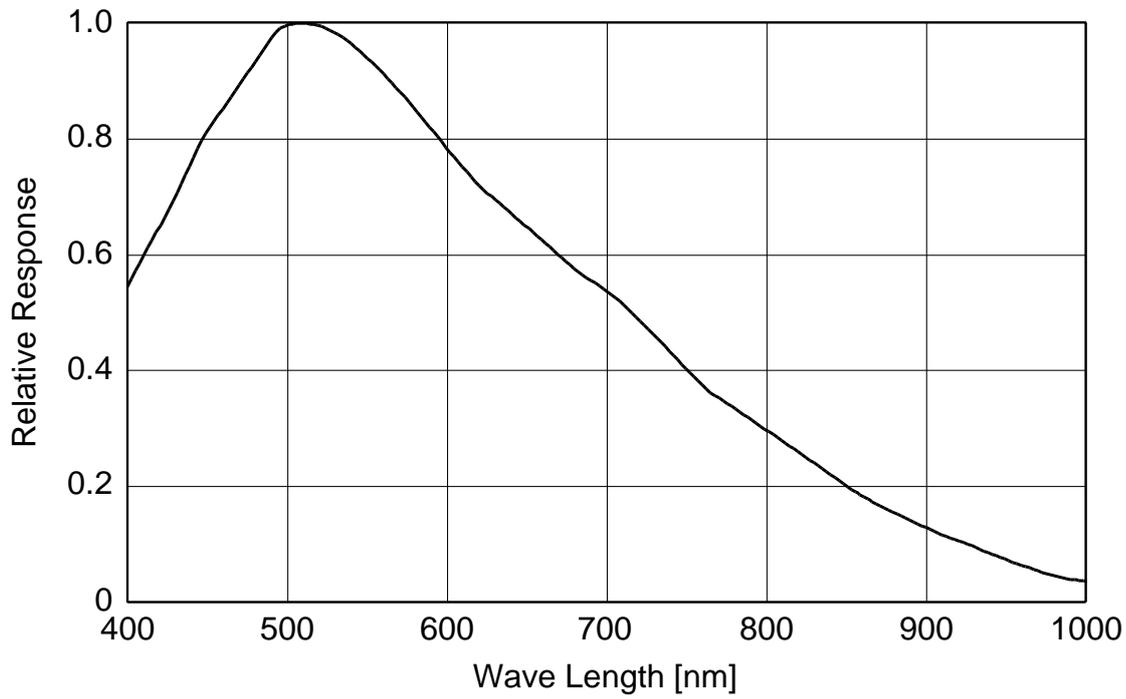


<BU130>

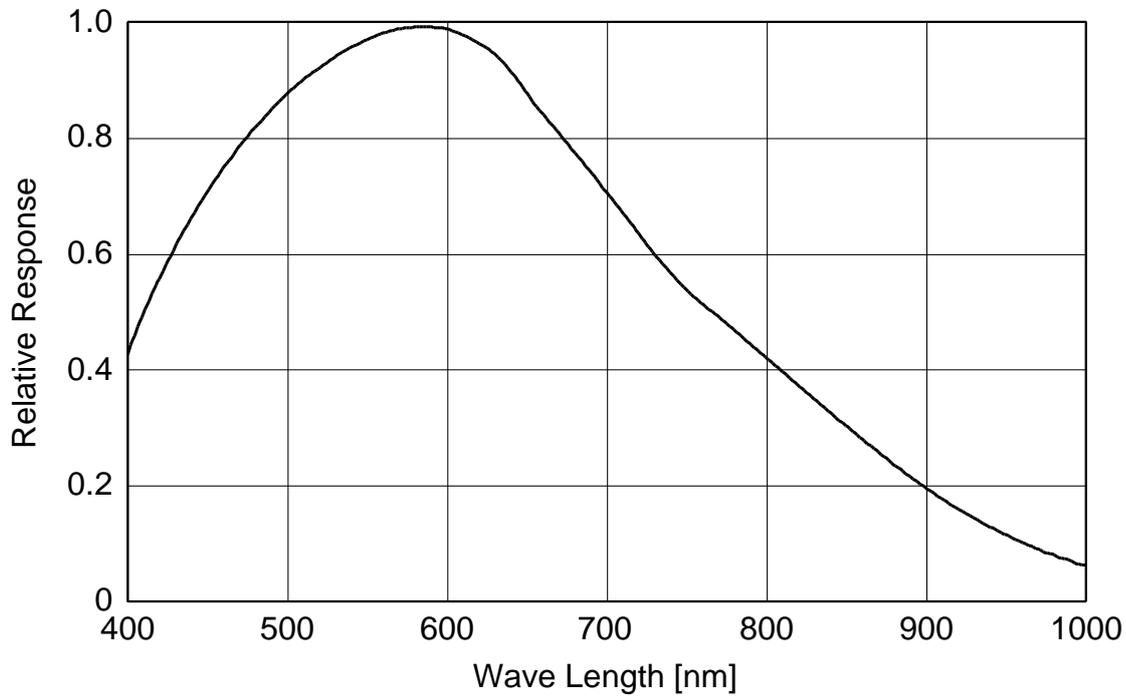


<BU030C>

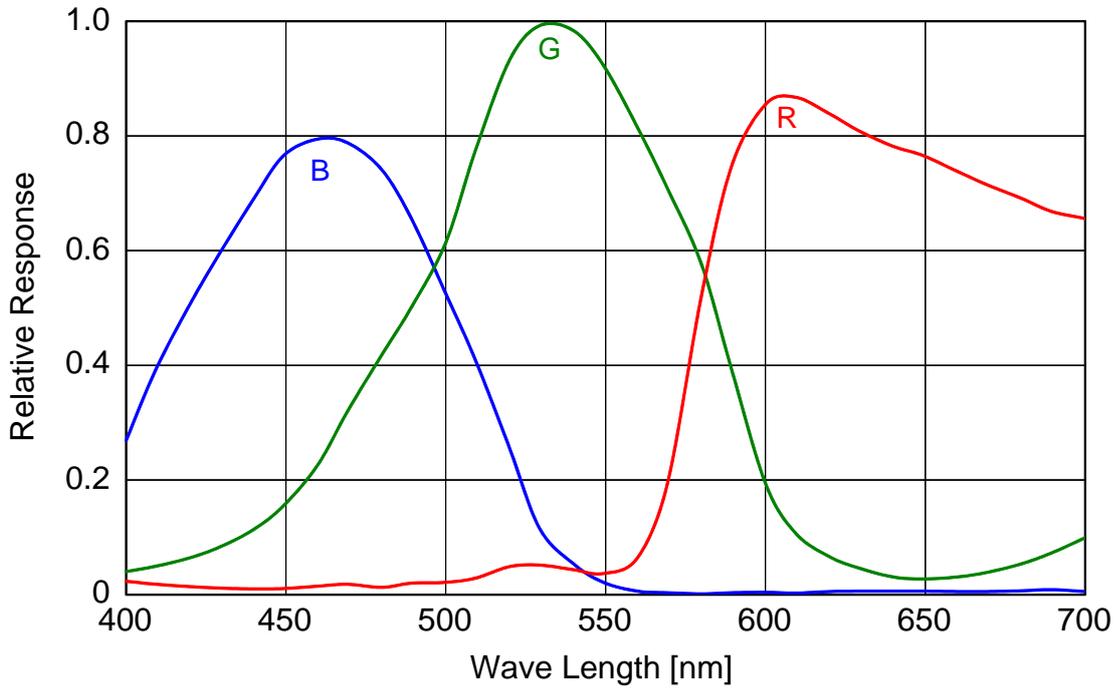


<BU030CF>

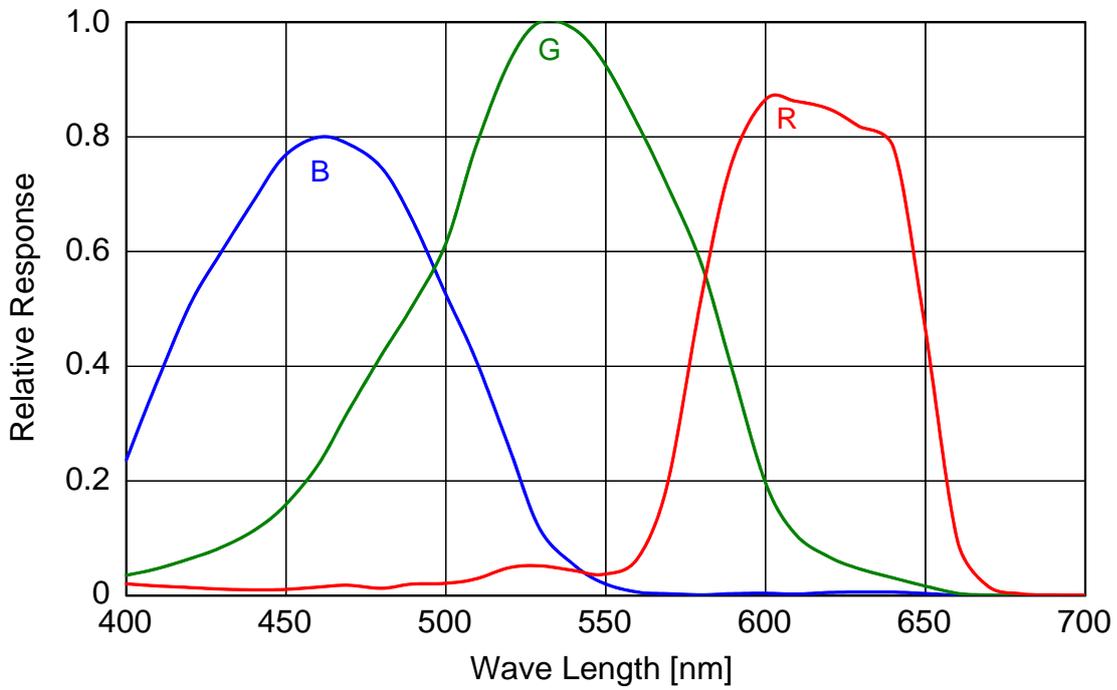

<BU130C>

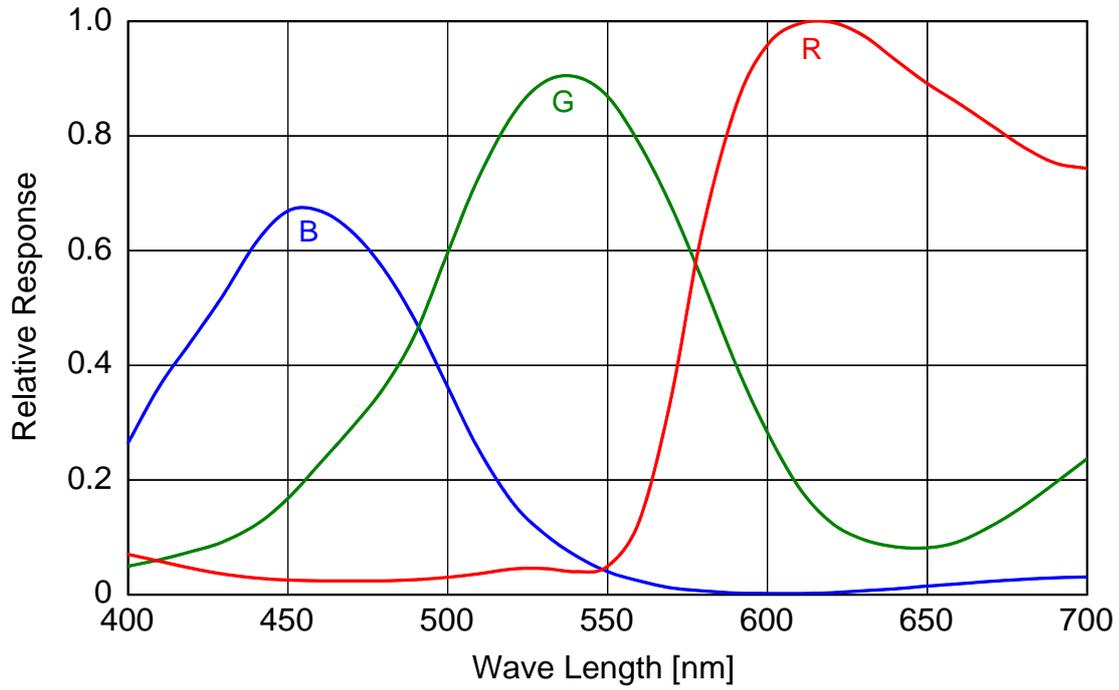

<BU130CF>

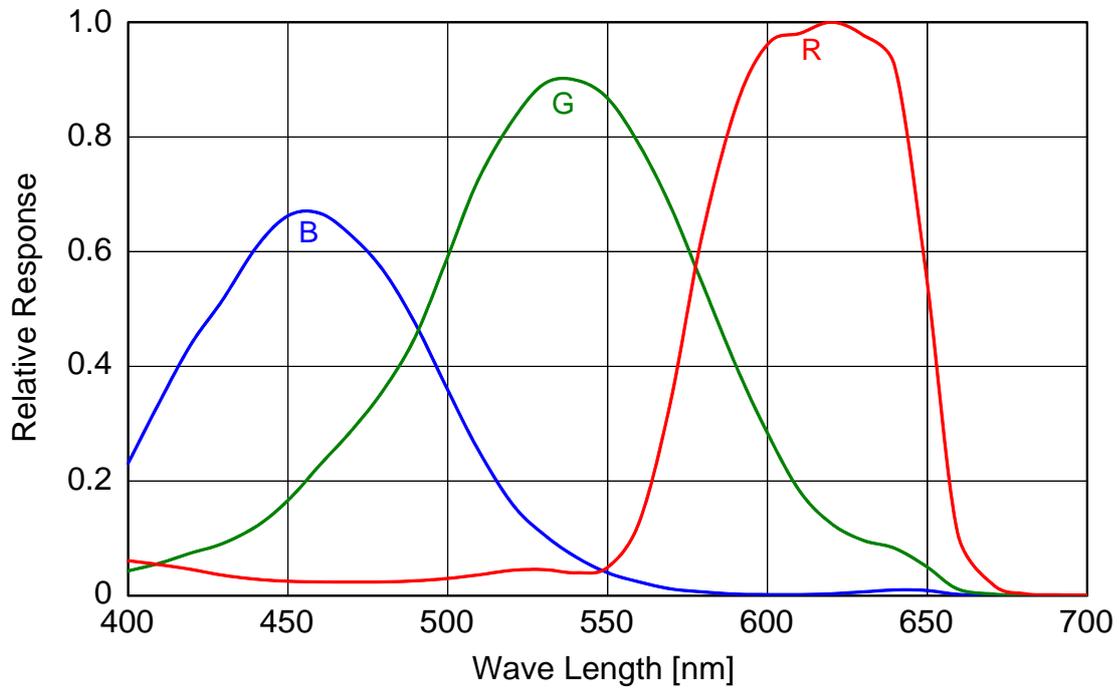


## 7. Timing chart

Image data outputs are transferred with USB bulk transfer. Timing numerical value below is described by absolute prerequisite that camera can use transmission band without restriction of other device. When there is other device on the same bus, the value described below is not guaranteed.

### 7.1 In Normal shutter mode

Pixel format: Mono 8, all pixels readout

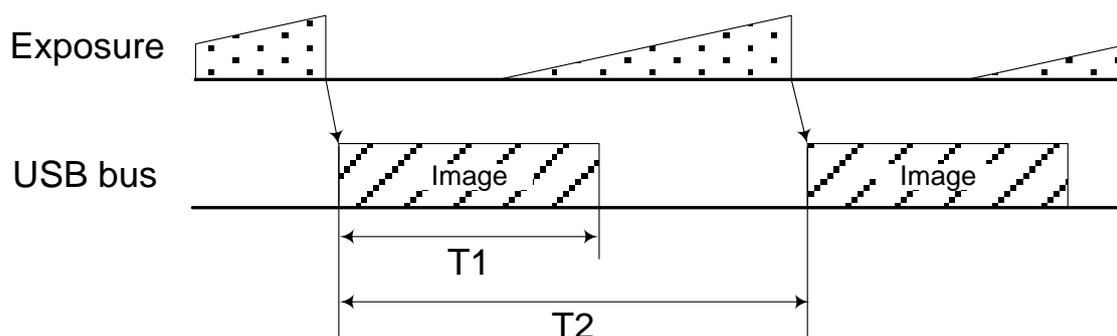


Model Name	T1 [ms]	T2 [ms]	Default Frame Rate [ms]
BU030	7.8	Frame Rate setting by the application.	8.0
BU031	7.8		8.0
BU080	25.0		25.0
BU130	33.3		33.3
BU030C	7.8		8.0
BU130	33.3		33.3

\* If the value of T2 is not set by the application, it will be the same as T1.

## 7.2 In Random Trigger Shutter mode


### - Edge mode / Bulk mode

Pixel format: Mono 8, all pixel readout

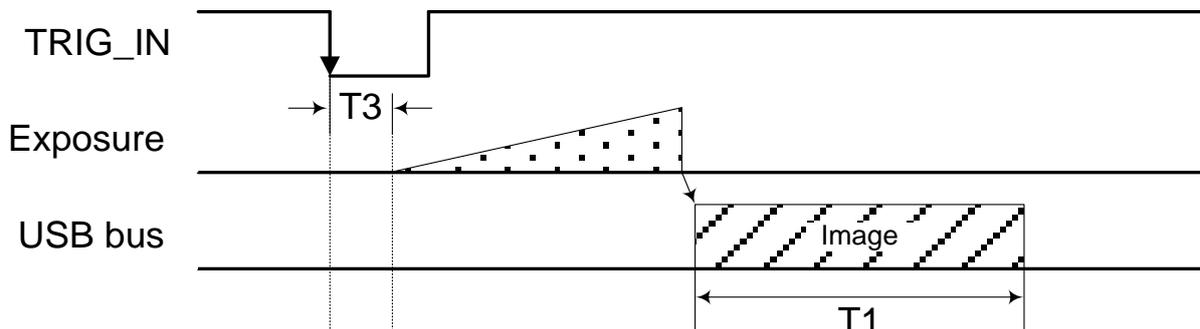

### - Level mode

Pixel format: Mono 8, all pixel readout

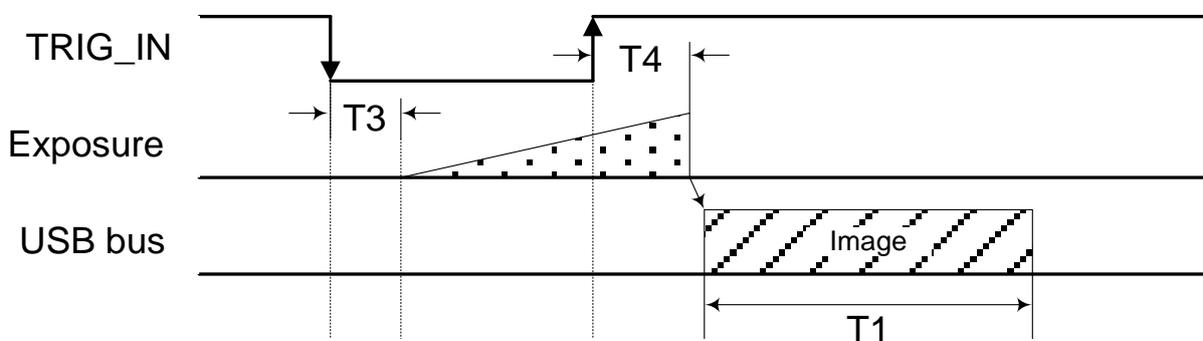

Model Name	T3 [ $\mu$ s]	T4 [ $\mu$ s]
BU030	1.0	2.5
BU031	1.0	2.5
BU080	2.2	34.0
BU130	1.2	7.1
BU030C	1.0	2.5
BU130C	1.2	7.1

\* The value of T1 and T2 are the same as the value of normal shutter mode.

\* T3 and T4 are typical value.

#### **Notes of Random Trigger Shutter mode:**

- In the period when FRAME\_TRIGGER\_WAIT (refer to GPIO output signals) signal is inactive, user must not input external trigger signal to this camera.
- When the interval of the input trigger signal is extremely short, or when the trigger signal is noisy, there is a possibility of causing the malfunction. In this case, please input a proper trigger signal.

## 8. Warranty rules

### 8.1 Warranty term

Warranty term is 36 months after your purchase. We may assume the date of the purchase from our shipping date when the date is unidentified.

### 8.2 Limited Warranty

Free warranty is not applicable for the troubles, damages or losses caused by the cases of the followings, even if it is during the warranty term.

1. Natural exhaust, wear or degradation of a component parts
2. Handling against the instructions and conditions described in the instruction manual
3. Remodeling, adjustment and the part exchange. (including the opening of the enclosure box and the alteration)
4. Using the accessories not included with the product or our non-designated optional articles
5. Damages caused during the transportation or deficiency of the handling such as drop or fall of the products after the products having been transferred to customers, leaving the products to corrosive environment such as sunlight, fire, sand, soil, heat, moisture, or an inappropriate storing method
6. A fire, an earthquake, a flood, a lightning, or other natural disasters, pollution and a short circuit, abnormal voltage, excessive physical pressure, theft, other accident
7. When connected to a product which is not recommended
8. When connected to the power supply which is not suitable
9. Forgery product, products which does not have proper serial number, products of which serial number is forged, damaged or deleted
10. All defects that happened after the expiration for a warranty term

## 9. Repair

### 9.1 Repair Methods

Exchange to a replacement or an equal function product.

### 9.2 Repair request methods

On the occasion of a repair request, please download the "Failure situation report sheet" from our website, fill in the necessary items and return it together with the defective product.

Repair Request Methods


[http://www.toshiba-teli.co.jp/en/support/contact/failure\\_situation.htm](http://www.toshiba-teli.co.jp/en/support/contact/failure_situation.htm)

Please read the following instructions carefully.

1. Please return our product alone, taking out of your equipment in case that our product is installed to an equipment
2. We are unable to return the information such as your own serial numbers, control number, the identification seal, if it is attached to the returned products. Please keep record before you return the product.
3. As the data saved in the camera will not be kept after the repair, please take out data before return.
4. We are unable to accept the cancellation after the repair request by the customer's reason.
5. About the repair product shipping expenses, please bear the charges when you return the product to us. We bear the charges to you from us only for a warranty period.
6. We are unable to accept your request of a delivery date and time of the product return, or the delivery method.
7. We are unable to accept a trouble factor investigation, the request of the repair report.
8. We accept a repair of out of warranty product, if it is reparable.
9. The proprietary rights of the repair request products after the exchange repair belong to us.
10. The immunity from responsibility of the product is applied in the repair completion products.

\* Please refer for the inquiry about the software to our homepage or sales personnel.

## 10. Outline Drawing

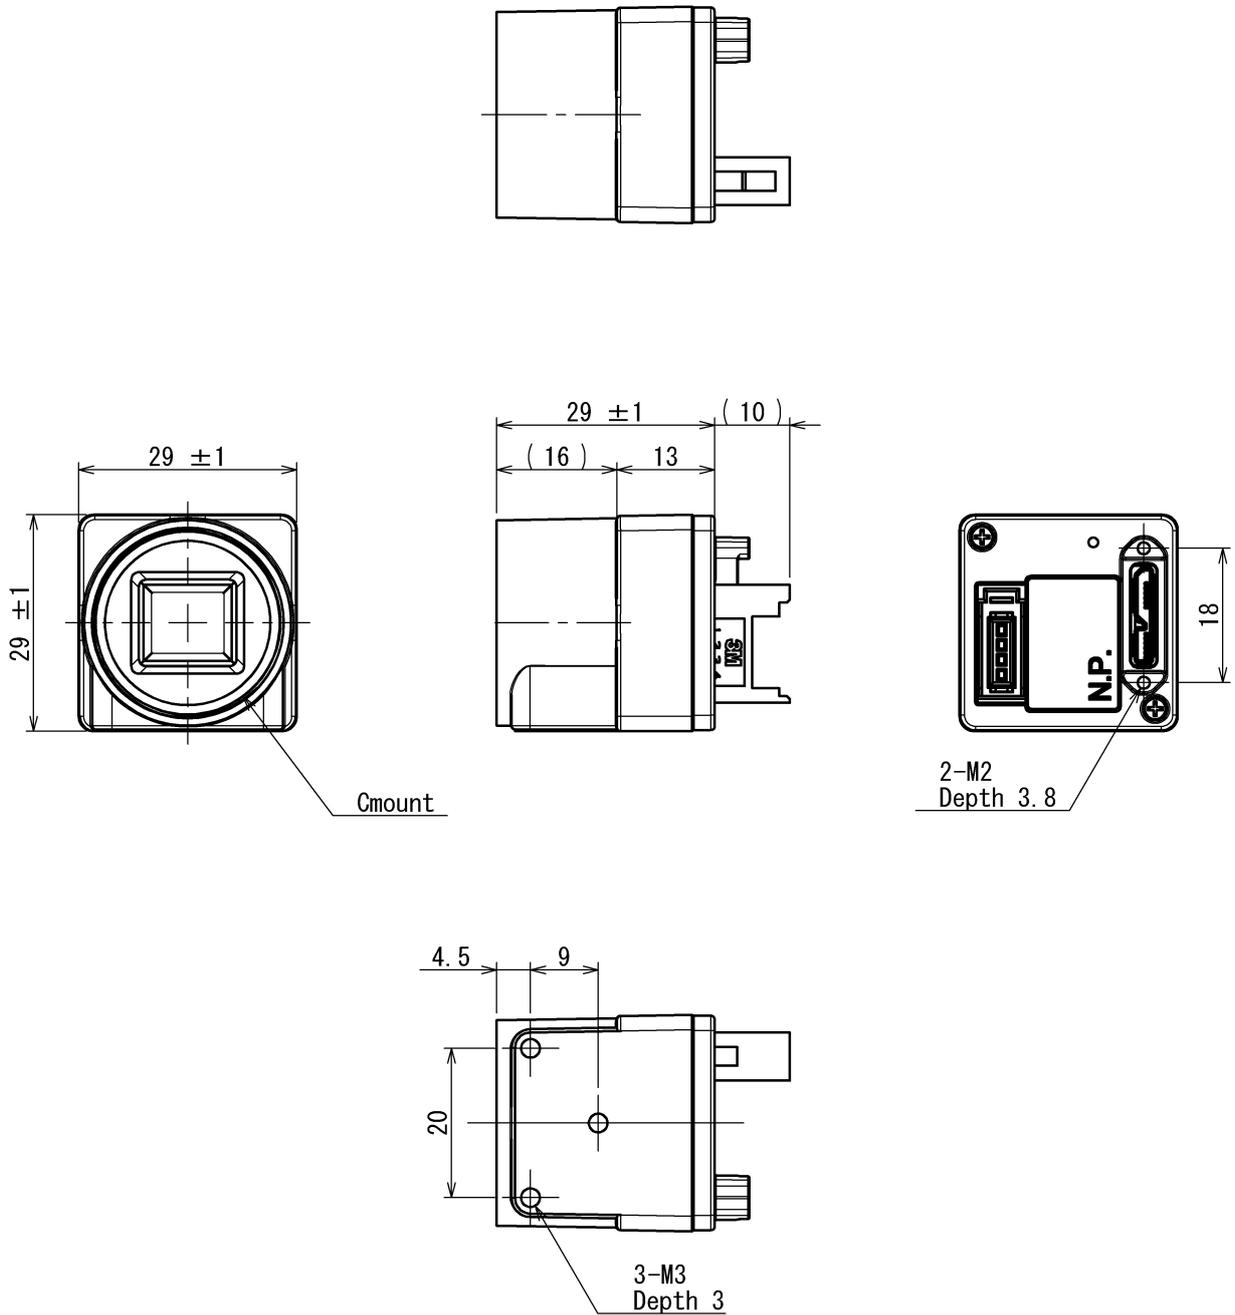

### Specification

Main material : Aluminum die-cast metal  
 Processing : Cation coating (black)